
## **Harvard University Media & Technology Services**

## Operating a Marantz PMD660 audio recorder

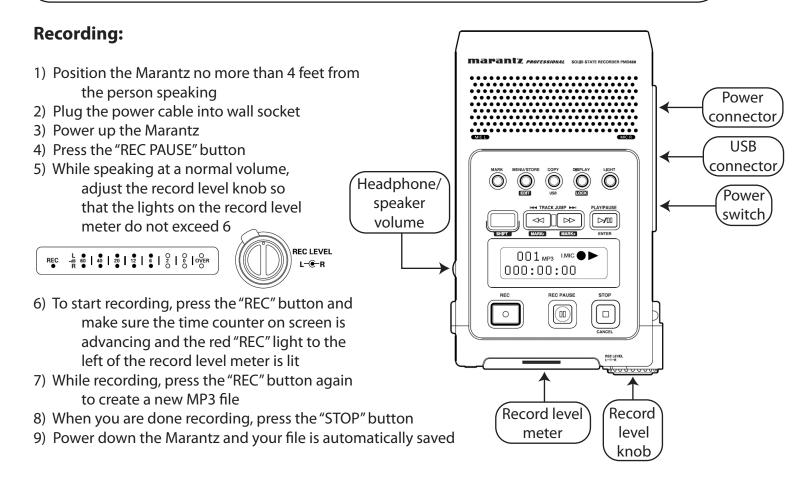

## **Playback:**

- 1) After stopping your recording, press the "PLAY/PAUSE" button to begin playback
- 2) Adjust the speaker volume with the "Headphone/speaker volume" knob on the left side of the unit
- 3) Use the "TRACK JUMP" forward and reverse buttons to switch files, if you have recorded multiple files
- 4) Hold down the "TRACK JUMP" forward and reverse buttons to fast forward and rewind
- 5) Press the "STOP" button to end playback

## Connecting to a computer (transfer and save your recordings):

- 1) After the recording is finished, press the "STOP" button
- 2) Power down the unit using the power switch on the right side of the Marantz
- 3) Connect the Marantz to your computer using the USB cable
- 4) While pressing the "USB" button on the Marantz, power up the unit and wait for the Marantz screen to read "USB"
- 5) Release the "USB" button and the Marantz will appear on your computer as a removable (external) drive
- 6) Access the Marantz via your computer and the single folder within the Marantz will contain your audio files
- 7) Copy them to your computer and eject the Marantz drive from your computer as you would any other external USB drive
- 8) Disconnect the USB cable and power off the Marantz

(For assistance, call Media & Technology Services at (617) 495-9460